

STANDARD SETUP

MATERIALS USED:



ACE-2000 Power Supply



SCE-492 Power Supply



RS 232 Serial Cable

The ACE-2000 is configured to run (plug and play) by default. Configuration can be customized if needed. These figures show step by step instruction on how to connect the ACE-2000 and Caption Encoder properly.

Step 1: Plug the power supply into the rear of the ACE server.



Step 2: Connect RS 232 Serial Cable from ACE to caption encoder



SCE-492



Step 3: Plug the power supply into the rear of the closed caption encoder (SCE-492)



STANDARD SETUP CONT.

Step 4: Connect monitor (HDMI or DVI) and keyboard/mouse to ACE server



MATERIALS USED:



Monitor



HDMI or DVI Cable



Keyboard and Mouse



SDI Cable

Step 5: Connect SDI cable with Embedded Audio feed to Caption Encoder

Step 6: Connect SDI cable with Embedded Audio feed to ACE unit

SCE-492



Open Captions to Out2

Closed Captions to Out1

Step 7: Connect SDI Output for Closed Captions to Out1 and Open Captions to Out2 on Caption Encoder